

FUEL PUMP RELAY

ON-VEHICLE INSPECTION

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. **REMOVE FUEL PUMP RELAY**

(a) Remove the fuel pump relay from the engine room No. 1 relay block.

3. **INSPECT RELAY**

(a) Measure the resistance of the fuel pump relay.

Standard resistance

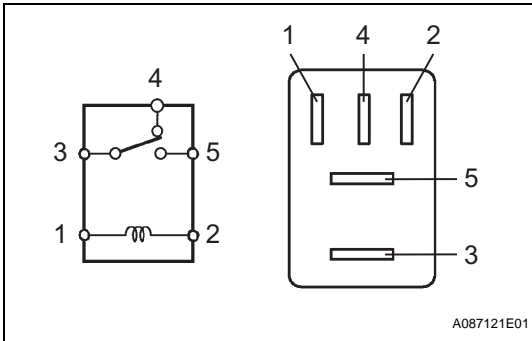

Tester Connection	Specified Condition
3 - 4	Below 1 Ω
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)
3 - 5	10 k Ω or more
3 - 4	10 k Ω or more (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

4. **INSTALL FUEL PUMP RELAY**

5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**